


Duelpad A14 Quick Start Guide

»»» Quick Guide

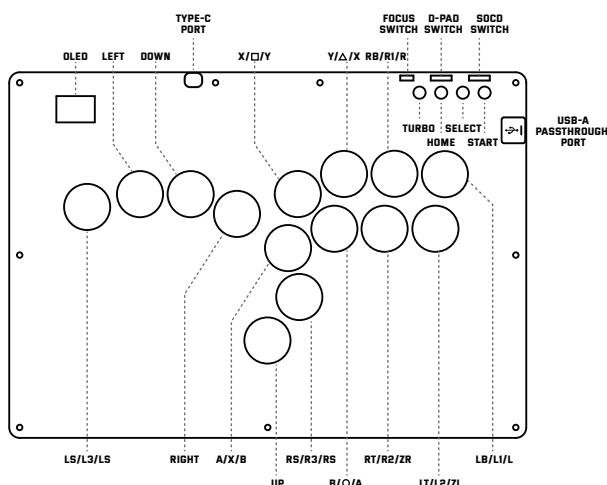

»»» Passthrough Port

For PS4, PS5, Xbox One, Xbox Series S, or Xbox Series X compatibility. You can use the console authentication device to plug in the passthrough port for authentication. For more information, Please contact customer service.

Authentication device recommendation:

For PS4/PS5: MagicBoots for ps4 v1.1(Mayflash)
For Xbox One/Xbox Series: Magic-X (Mayflash)

»»» Focus Modes Settings

Disable non-essential keys to help you maintain a competitive edge in intense battles.

Focus Switch On

Disable: Home>Select/Strat/Button LEDs

Focus Switch OFF

Enable: Home>Select/Strat/Button LEDs

»»» DPad Modes Settings

To change D-pad modes,Please flip the Dpad switch.

DPad Digital (Default): Move the switch to the middle

Left Analog Stick : Move the switch to the Right

Right Analog Stick: Move the switch to the Left

»»» RGB LEDs Settings

To change RGB LED Animations, please hold down Start + Select and press one of the following buttons

SELECT + START + X Next Animation

SELECT + START + A Previous Animation

SELECT + START + Y Brightness Up

SELECT + START + B - Brightness Down

SELECT + START + RB LED Parameter Up


SELECT + START + RT - LED Parameter Down

SELECT + START + LB Pressed Parameter Up

SELECT + START + LT Pressed Parameter Down

»»» Input Modes

To change input modes, please press and hold down one of the following buttons before power on the gamepad.

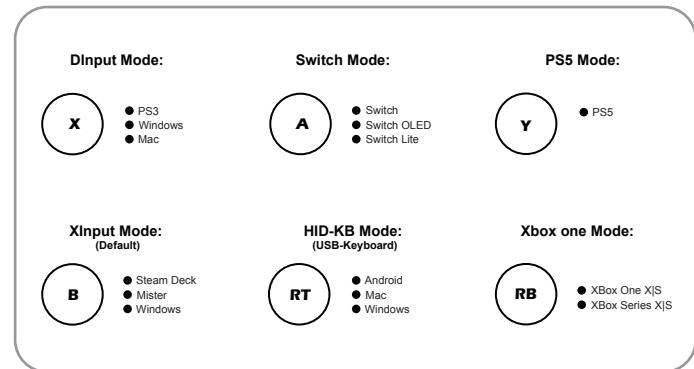

»»» SOCD Modes

To change SOCD modes,Please flip the SOCD switch

SOCD Up Priority:

Move the switch to the Right

1st Input + 2nd Input	Result
Left + Right	Neutral
Right + Left	Neutral
Up + Down	Up
Down + Up	Up

SOCD Neutral(Default):

Move the switch to the middle

1st Input + 2nd Input	Result
Left + Right	Neutral
Right + Left	Neutral
Up + Down	Neutral
Down + Up	Neutral

SOCD Last Win:

Move the switch to the Left

1st Input + 2nd Input	Result
Left + Right	Right
Right + Left	Left
Up + Down	Down
Down + Up	Up

»»» Turbo Modes

To enable Turbo mode, please hold down the TURBO button and press the corresponding button, including X/Y/RB/LB and A/B/RT/LT. The speed can be adjusted from 1 to 60 times per second.

Note: Any changes made to the gamepad's settings will not be saved once it loses power. The turbo mode's default speed is 15 times per second.

Increase Speed (TURBO + UP)

Lower the Speed (TURBO + DOWN)

»»» Web Configuration

The gamepad is built-in a local web server to set up the configurations. please follow these steps to access the webpages.

1.Press and hold **START** before plug the gamepad into a computer with usb type-c cable.

2.Open a browser and navigate to <http://192.168.7.1>. Then, you can proceed with the gamepad settings



Firmware Updates

1. Download the latest firmware from www.duelpad.com/support.
2. Hold down the **BOOT** button on the gamepad, then plug it into the computer using a type-c cable. Afterwards, the **RPI-RP2 drive** will appear on your computer.
3. Then, copy the latest firmware to the drive to complete the update.
4. If the update is successful, the gamepad will restart and be detected as a controller again.



Buttons Mapping

RP2040	XInput	Switch	PS3	PS4	DInput	Arcade	Keyboard (HID-KB)
PIN19	A	B	Cross	Cross	2	K1	Left Shift
PIN24	B	A	Circle	Circle	3	K2	Z
PIN18	X	Y	Square	Square	1	P1	Left Control
PIN25	Y	X	Triangle	Triangle	4	P2	Left Alt
PIN29	LB	L	L1	L1	5	P4	C
PIN27	RB	R	R1	R1	6	P3	Spacebar
PIN28	LT	ZL	L2	L2	7	K4	V
PIN26	RT	ZR	R2	R2	8	K3	X
PIN05	Back	Minus	Select	Share	9	Coin	5
PIN06	Start	Plus	Start	Options	10	Start	1
PIN02	LS	LS	L3	L3	11	LS	Equal
PIN01	RS	RS	R3	R3	12	RS	Minus
PIN04	Guide	HOME	PS	PS	13	Home	9